

Mp ACCESSIBILITY






PLATFORM LI up to 2 m



MP PLATFORM STAIRLIFT V64 FOR STRAIGHT STAIRS

The MP V64 platform stairlift is the ideal solution for allowing those with a disability or in a wheelchair to get up and down stairs with maximum safety.

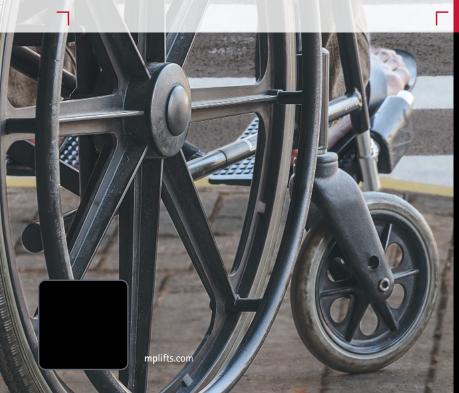



PLATFORM STAIRLIF for curved stairs



CHAIR STAIRLIFT for straight stairs



HAIR STAIRLIFT or curved stairs











CHAIR STAIRLIFT FOR STRAIGHT STAIRS

STANDARD MODEL

USES

This chair stairlift, which ensures maximum reliability and minimum noise, is designed to allow those with reduced mobility or in a wheelchair to get up and down straight stairs and steps effortlessly.

BENEFITS

RELIABLE AND RESISTANT

MP's stairlifts can be installed on the inside and outside of buildings thanks to their technical features, which ensure maximum durability and exceptional performance even in poor weather conditions.


ACCESSIBILITY

These products are the ideal solution for ensuring accessibility in public buildings as well as council and privately owned houses and flats, allowing those in a wheelchair to get up and down stairs and steps effortlessly.


SAFE AND EASY TO USE


MP's stairlifts ensure minimum noise.



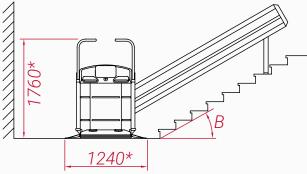

*THESE MEASUREMENTS ARE FOR THE STANDARD MODEL

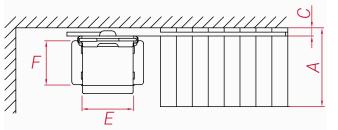

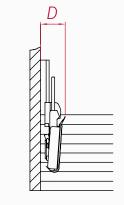

TECHNICAL INFORMATION

MODEL*	STANDARD	LARGE	EXTRA LARGE
MINIMUM STAIR WIDTH (A)	970 mm	1040 mm	1070 mm
GRADIENT ALLOWED (B)	7º to 50º	7° to 50°	7° to 50°
MINIMUM SPACE OCCUPIED BY THE GUIDE RAIL (C)	100 mm	100 mm	100 mm
MINIMUM SPACE OCCUPIED BY	370 mm	370 mm	370 mm
THE CLOSED PLATFORM (D)			
PLATFORM SIZE (ExF)	830 x 700 mm	1050 x 770 mm	1250 x 800 mm
WEIGHT CAPACITY UP TO 45°	300 kg	300 kg	250 kg
WEIGHT CAPACITY MORE THAN 45°	200 kg	200 kg	200 kg
SPEED	5 m/min	5 m/min	5 m/min
POWER SUPPLY	230 V	230 V	230 V
MOTOR SIZE	0.75 kW	0.75 kW	0.75 kW

*Model not recommended for residential buildings adapted for those with disabilities or public buildings

STANDARD FEATURES AND SAFETY

- Design in accordance with Directive 2006/42/EC on Machinery
- Controls protected against accidental use and can only be used when an operator is present
- Removable key
- Emergency stop
- Manual emergency operation
- Progressive mechanical buffer
- Overspeed governor
- Automatic safety edges
- Handrails
- Electronic safety limit switches
- Devices to protect against jolts (shock absorption), power outages and passengers becoming crushed
- Radio frequency remote control
- Overload alarm that lights up and makes a sound when activated

OPTIONAL

- Protective cover
- Powered opening
- Platform with special size
- Sound when moving
- Light when moving
- Fold-up seat
- Remote control column
- Retractable rails
- Radio frequency remote control for those accompanying passengers
- Suitable for outdoor installation

THE TECHNICAL INFORMATION GIVEN IS FOR GUIDANCE ONLY AND IS IN NO WAY BINDING.